

WARNING

Read all instructions and warnings carefully. Failure to do so may result in damage to this product, personal property and/or personal injury. For maximum strength, hooks and buckles must be in line with direction of pull. Never stand in the direction path of tensioned load. Protect webbing from sharp edges, hot surfaces and acids. DO NOT use if webbing is frayed or worn. Tie-Downs are not to be used as personal restraints, a towing device or to hold human weight. Always inspect the Tie-Down straps prior to use. Area of attachment to trailer, van or pickup must be of sufficient strength. Do not use extension bar lever, pliers or any tools to over tighten the Tie-Downs. Use hand power only. Store indoors. Attach Tie-Down to frame members where it will not slip side-to-side in transit. Tie-Downs are consumable products and will break down after use and exposure to elements and weather. Kinedyne® Corporation nor its affiliates are not responsible for damages or injury which may result from the improper use of Tie-Downs. Installer shall consult the vehicle manual, manufacturer and/or authorized representative in regards to proper kit installation. Ensure installation is in compliance with all local, state and federal regulations.

Thank you for choosing Steadymate.

KINEDYNE

STEADYMATE

TYING DOWN YOUR OUTDOOR ADVENTURE TOYS

KINEDYNE CUSTOMER SERVICE
(800) 848-6057 in the United States
(800) 268-3530 in Canada
(785) 841-4000 for International Sales

DOC ID.
10001049 REV A

www.steadymate.com



TYING DOWN YOUR OUTDOOR ADVENTURE TOYS

SURFACE MOUNT L TRACK KIT


PART NUMBER 15522

The Surface Mount L Track Kit with Steadymate® Stud Fitting is designed to be used in conjunction with the Steadymate fittings and Cinchtite® Series Tie-Downs.

- Determine required location to properly secure motorcycle or relational vehicle. Ensure the track is positioned so the vehicle weight is evenly distributed over the trailer axle.
- Mark two (2) hole positions on the floor of the trailer using track as a template.
- Drill two (2) 1/4" diameter hole in the desired location. Make sure to check for clearance from brake lines, electrical wires or other critical elements of the trailer.
- Install track as shown.
- Apply thread-locking adhesive and torque flange nut to 30-35 ft-lbs upon installation.


⚠ WARNING

THIS TRACK KIT IS TO BE USED AS AN ANCHOR POINT FOR MOTORCYCLE OR RECREATIONAL VEHICLES. THE VEHICLE FLOOR STRUCTURE, WHERE THE TRACK PIECES ARE TO BE ATTACHED, SHALL HAVE EQUAL OR GREATER STRENGTH THAN THE SYSTEM BEING INSTALLED.

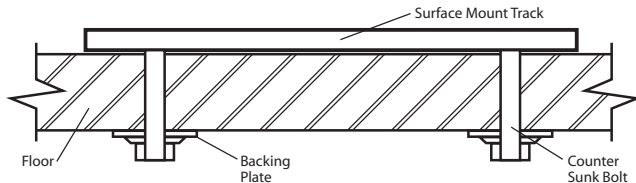

32401 – Steadymate Stud Fitting

- Grasp the blue housing of the Steadymate Stud Fitting (32401S) between your first and second fingers. Place thumb on plunger in middle of ring and depress.
- Line up Steadymate Stud Fitting with the middle hole on the Surface Mount L Kit.
- Push the Stud Fitting down and slide forward or backward in the L track to desired location.
- Align the plunger between any two holes, release the plunger and housing to engage.
- Grasp the Stud Fitting by ring and slide forwards and backwards to ensure the housing has engaged and locked into the track.
- Attach any Steadymate Tie-Down to secure your cargo.
- To remove the Stud Fitting, simply grasp the blue housing between your first and second fingers, place thumb on plunger in middle of ring and depress. Slide the Stud Fitting to any hole in track and lift to remove.

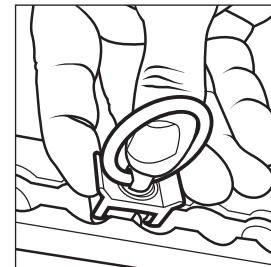

You'll find detailed information on all Steadymate products at www.steadymate.com